

# FAIL message

## Condition:

Display shows FAIL during the firing or it is stuck on FAIL. The FAIL message indicates a broken thermocouple or broken thermocouple wiring. The controller display will stick on FAIL if there is no thermocouple detected by the controller.

8.5a

KM Error Msgs

Failmess.vsd

