


GlassMaster Mounting Template

TOP

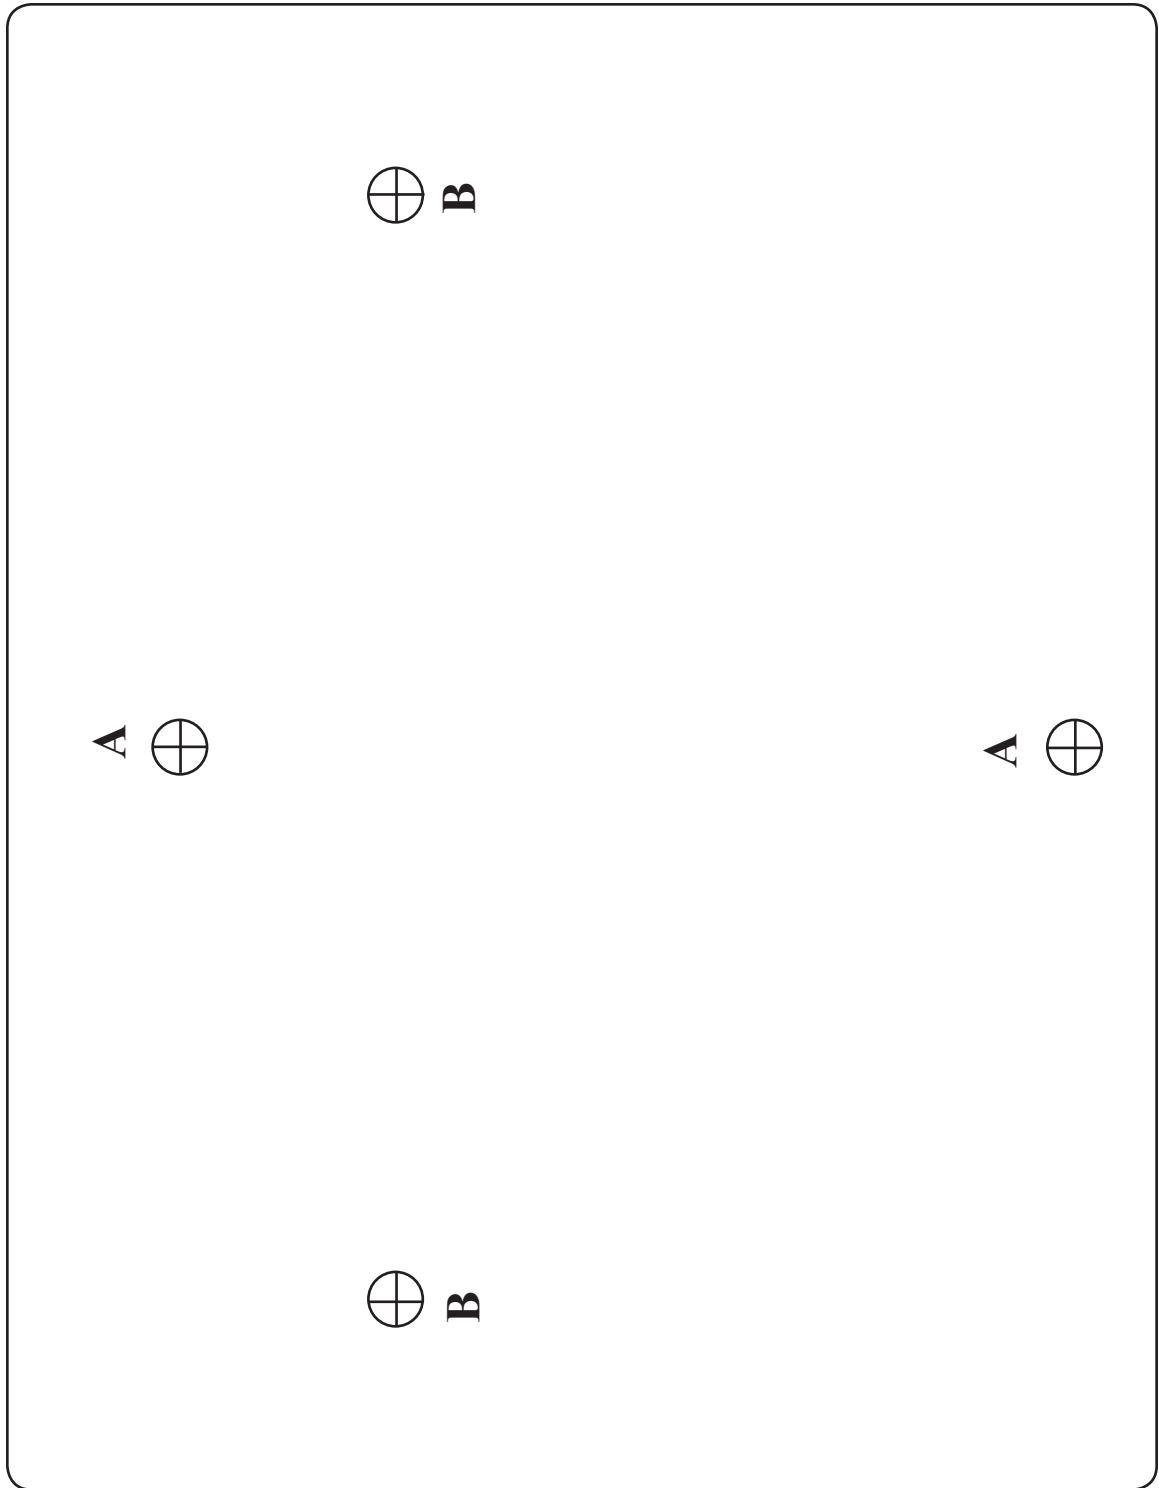

Remove this page with scissors or make a copy. Line up the template so the holes marked "A" are centered on a stud and tape it to the wall. Screw in a #12 x 2" wood screw (included in the manual packet) in both holes marked "A", leaving an 1/8" gap between the wall and the screw head. Remove the template and hang the controller over the 2 screw heads. If a stud cannot be located it will be necessary to use four 1/4" x 2" molly bolts in the holes marked "A" and "B".